



90° Herringbone

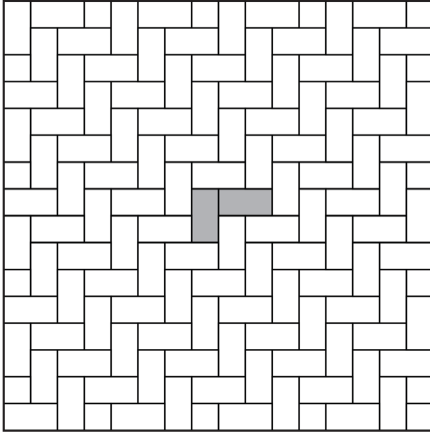


100% Holland Rectangle

45° Herringbone

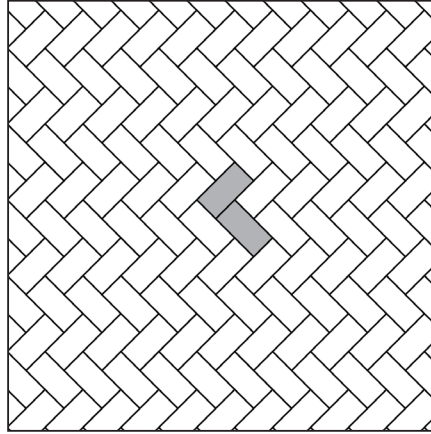


100% Holland Rectangle

Stack Bond

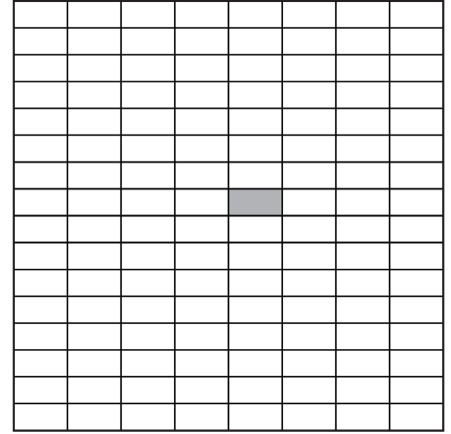


100% Holland Rectangle

Running Bond

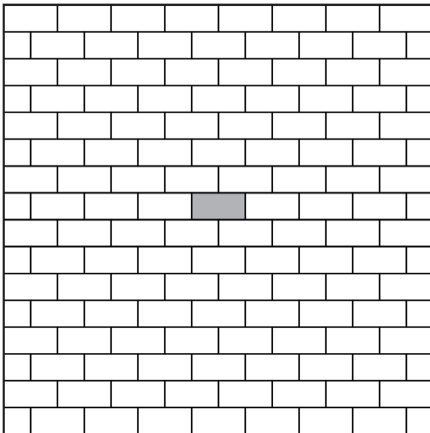

100% Holland Rectangle

Basketweave

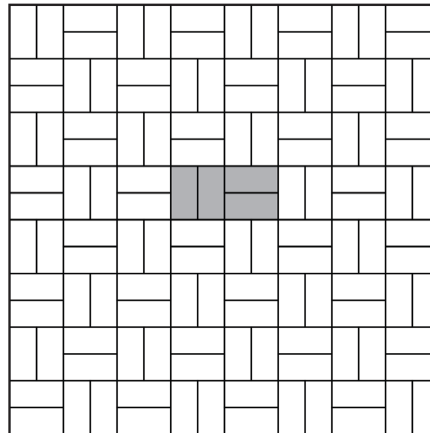

100% Holland Rectangle

Installation Tips:

- Begin laying pavers at a corner, following a string or chalk line to keep lines straight.
- To ensure good color distribution, take pieces from several pallets at once.
Remove paving stones in stacks rather than layers.
- Pallet configuration for some products may not exactly meet pattern requirements.
Cutting may be required.